

# BuzzMe



2/4 LINE ALPHANUMERIC FLEX PAGER

Thank you for choosing the BuzzMe Pager.

## Tomvic Industries Ltd

PO Box 34634, Birkenhead  
13 Sunnyhaven Avenue  
Beach Haven Village  
Auckland  
Ph: (09) 481 9020  
Fax: (09) 481 9029  
Email: info@tomvic.co.nz  
Web: www.tomvic.co.nz

## Getting Started

### Pager Features:

- 4 lines of standard text, 64 characters per screen
- Zooms to 2 lines of text for easy readability, 24 characters per screen
- 50 personal message slots
- Notebook for storage of extra messages
- 3 alarm clocks
- Standard beep, 15 tone/melodies, vibrate and silent
- Timer function
- Backlight

### Function Buttons



### Alert Settings



Personal



Public

- From blank screen press **•** twice to enter the function menu.
- Press **„** to move to 'Set Alert'.
- Press **•** to enter alert options.
- Press **„** to scroll through options.
- Press **•** to select alert.

For alerts with more than 1 option:

- Press **•** to scroll through options.
- Press **™** to confirm setting.

2

### Pager On

- Place one AAA alkaline battery into back of pager.
- Press **™**, pager will alert. Press **™** to stop alert.

### Pager Off

- From blank screen press **•** twice.
- Select 'On/Off Pager' using **„**.
- Press **•** to turn pager off.
- Repeat steps above to turn pager on.

5

### Time and Date

- From blank screen press **•** twice to enter function menu.
- Press **„** to move to 'Set Time'
- Press **•** to enter 'Set Time' options.
- Press **„** to move to 'Set Time'.
- Press **•**
- Press **•** to adjust digits.
- Press **„** to move cursor to next digit.
- Press **™** to confirm setting.

3

### Function Menu

- From blank screen press **•** twice to enter function menu.
- Press **„** to move through function menu icons.
- Press **•** to enter the current selected function sub-menu (function setting mode).

### Icons

- |                          |                           |
|--------------------------|---------------------------|
| Unread Message Indicator | In-Range Indicator        |
| Next Page Indicator      | Tone Alert Indicator      |
| Low Battery Indicator    | Vibration Alert Indicator |
| Alarm Function Active    | Silent Alert Indicator    |

6

### Alarm Setting (3 Alarms)

- From blank screen press **•** twice to enter function menu.
- Press **„** to move to 'Set Time'.
- Press **•** to enter 'Set Time' options.
- Press **„** to move to 'Set Alarm'
- Press **•**
- Press **•** to adjust digits.
- Press **„** to move cursor to next digit.
- Press **™** to confirm alarm settings.

First Digit = specifies which alarm  
Following 4 Digits = time  
Last Icon = Alarm alert option

1

4

7

## Reading a Message

When a message is received your pager will alert.

- Press **TM** to read the new message.
- If message is longer than one screen press **TM** until message is read.
- Press **„** to skip forward between messages.
- Press and hold **„** to reverse through messages.
- Pager will alert user every 3 minutes if there is an unread message.

## Saving a Message in Notebook Area

- Display message on the screen.
- Press **•**
- Press **„** to **□□** to save message in notebook area.

## Reading Message in Notebook Area

- From blank screen press **TM** twice.
- Press **„** to move to 'Mesg Storage'.
- Press **TM** to read messages stored in Notebook Area.
- Press **„** to scroll through messages.

## LCD Contrast Adjustment

- From a blank screen press **•** twice to enter the function menu.
- Press **„** to move to 'Set Time'.
- Press **•**
- Press **„** MOVE to 'LCD Contrast'.
- Press **•**
- Press **•** to adjust contrast.
- Press **TM** to confirm setting.

## Saving a Message

When 50 messages have been received in the Personal Message Area the next personal message will overwrite the oldest message. Therefore, it is important to save messages that you do not want to be overwritten.

- Display message on the screen
- Press **•**
- Press **„** to **☑** to save the message.
- Repeat steps above to unprotect message.

## Backlight

- Press and hold **TM** for 2 seconds

## Auto On/Off

- From a blank screen press **•** twice to enter the function menu.
- Press **„** to move to 'Set Time'.
- Press **•**
- Press **„** to 'Set Auto'.
- Press **•**
- Press **•** to adjust digits.
- Press **„** to move cursor to next digit.
- Press **TM** to confirm setting.

## 2/4 Line Display

- From blank screen press **•** twice to enter function menu.
- Press **„** to 'ZOOM'.
- Press **•** to adjust between 2 and 4 lines of text.
- Press **TM** to confirm setting.

## To Install or Replace Battery

- Replace battery when the low battery indicator has been displayed on LCD.
- Always use an ALKALINE battery.

## Deleting a Message

- Display message on the screen.
- Press **•**
- Press **„** to **□□** to delete individual message.

## Delete All Messages

- From a blank screen press **•** twice to enter the function menu.
- Press **„** to move to 'Del All Msgs'.
- Press **•** to delete all messages.

## Timer Set

- From a blank screen press **•** twice to enter the function menu.
- Press **„** to move to 'Set Time'.
- Press **•**
- Press **„** to 'Set Timer'.
- Press **•**
- Press **•** to adjust digits.
- Press **„** to move cursor to next digit.
- Press **TM** to confirm timer setting.

## BuzzMe Paging Accessories

Give your pager added protection and security with the range of PagerMate® accessories.



A large selection of pager pouches are available. These all provide added protection for the pager screen and are splash proof.

For added security PagerMate® has a large range of chains and bungee cords to ensure you won't lose your pager while on the move.

